


1. Set (Gas Spring and Flange) Example : DNT1000-16FC13.7

In case requiring gas spring and flange by the set, please specify to set when ordering.

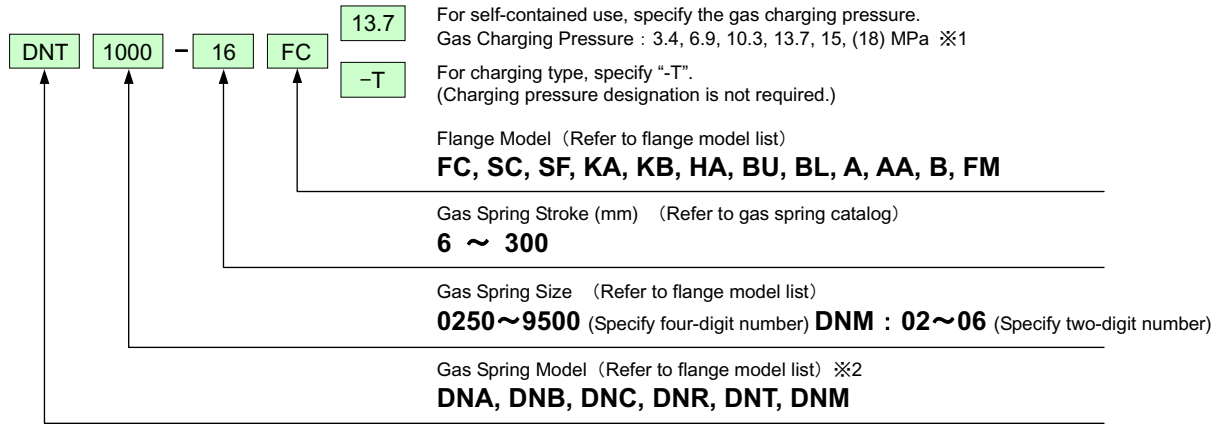


※1 : Choose one of the recommended gas pressure levels shown above. For the charging pressure other than above, specify the pressure to one digit after the decimal. The gas charging range is 3.4~13.7MPa at 20°C. 3.4~15MPa at 20°C for model DNT,DNR. (3.4~18MPa for DNT0350, DNR0350 only)

※2 : For gas spring model DNP please refer to our separate pamphlet PA-207E(3).

2. Gas Spring Model Example : DNA0750-50BF-T

In case requiring only the gas spring, please specify BF as the gas spring type when ordering.

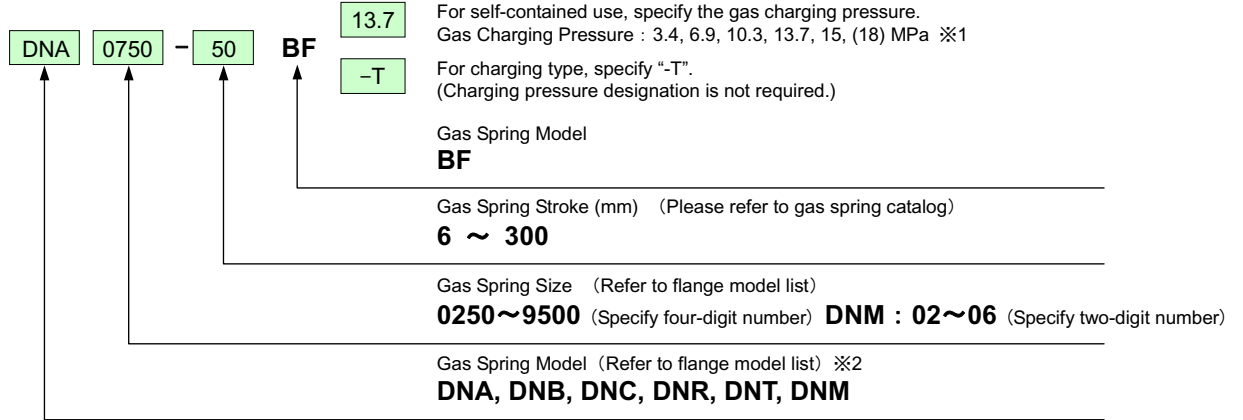

※1 : Choose one of the recommended gas pressure levels shown above. For the charging pressure other than above, specify the pressure to one digit after the decimal. The gas charging range is 3.4~13.7MPa at 20°C. 3.4~15MPa at 20°C for model DNT,DNR. (3.4~18MPa for DNT0350, DNR0350 only)

※2 : For gas spring model DNP please refer to our separate pamphlet PA-207E(3).

3. Flange Model Example : DJF0750-FC

In case requiring only the flange, please specify the model name of the flange when ordering.

