 


Ordering gas spring and flange by the set

Example : DNP1800-16PSC-T

In case requiring a gas spring and a flange by the set, please specify the set model name as below.

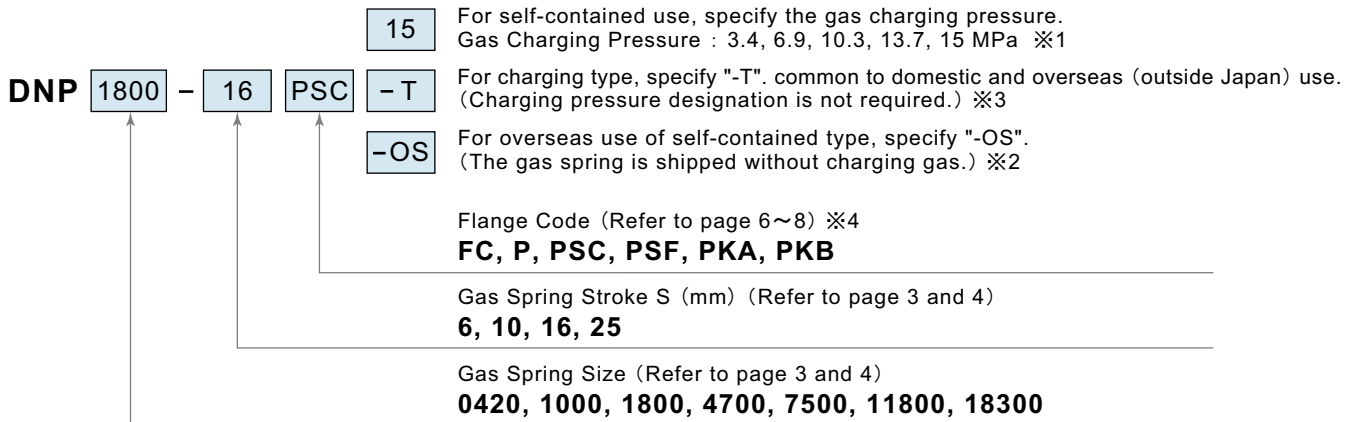 


- ※1: Choose one of the recommended gas pressure levels shown above. For the charging pressure other than above, specify the pressure to one digit after the decimal. The gas charging range is 3.4 MPa to 15 MPa at 20°C.
- ※2: Charging gas to those gas springs to be shipped to outside Japan is prohibited by law.
- ※3: Check valve is not mounted at shipment. (Refer to page 6~8)
- ※4: When applying SC, SF, KA, KB model flange to gas spring model DNP, a manifold base (P) is necessary. The flange codes by the set including manifold base (P) are PSC, PSF, PKA and PKB.

Ordering gas spring by itself

Example : DNP1800-16BF15

In case requiring only the gas spring, please specify BF as a gas spring code.

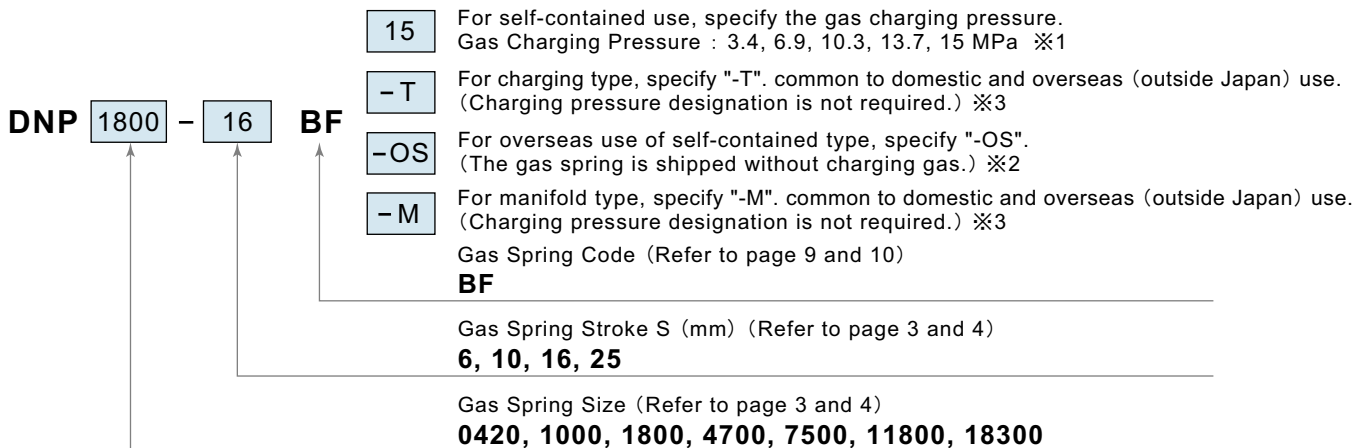 


- ※1: Choose one of the recommended gas pressure levels shown above. For the charging pressure other than above, specify the pressure to one digit after the decimal. The gas charging range is 3.4 MPa to 15 MPa at 20°C.
- ※2: Charging gas to those gas springs to be shipped to outside Japan is prohibited by law.
- ※3: Check valve is not mounted at shipment. (Refer to page 9 and 10)

Ordering flange by itself

Example : DJF075-FC

In case requiring only the flange, please specify the model name of the flange as below.

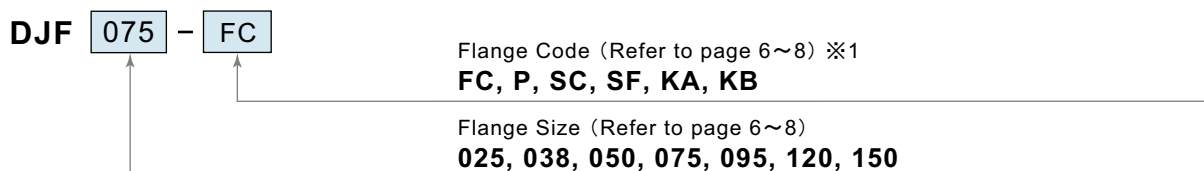

- ※1: When applying SC, SF, KA, KB model flange to gas spring model DNP, manifold base (P) is necessary. A manifold base should be ordered separated, as model SC, SF, KA and KB do not have manifold base.