


Ordering gas spring and flange by the set

Example: DNT1500-50FC-T

In case requiring a gas spring and a flange by the set, please specify the set model name as below.

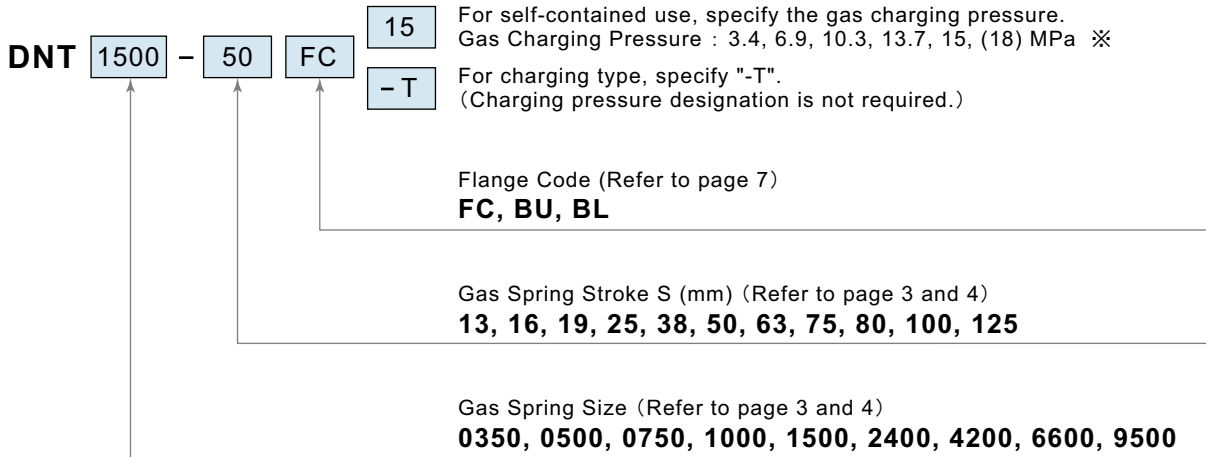


※: Choose one of the recommended gas pressure levels shown above. For the charging pressure other than above, specify the pressure to one digit after the decimal. The gas charging range is 3.4 MPa to 15 MPa at 20°C. (3.4~18MPa for DNT0350 only)

Ordering gas spring by itself

Example: DNT1500-50BF15

In case requiring only the gas spring, please specify BF as a gas spring code.

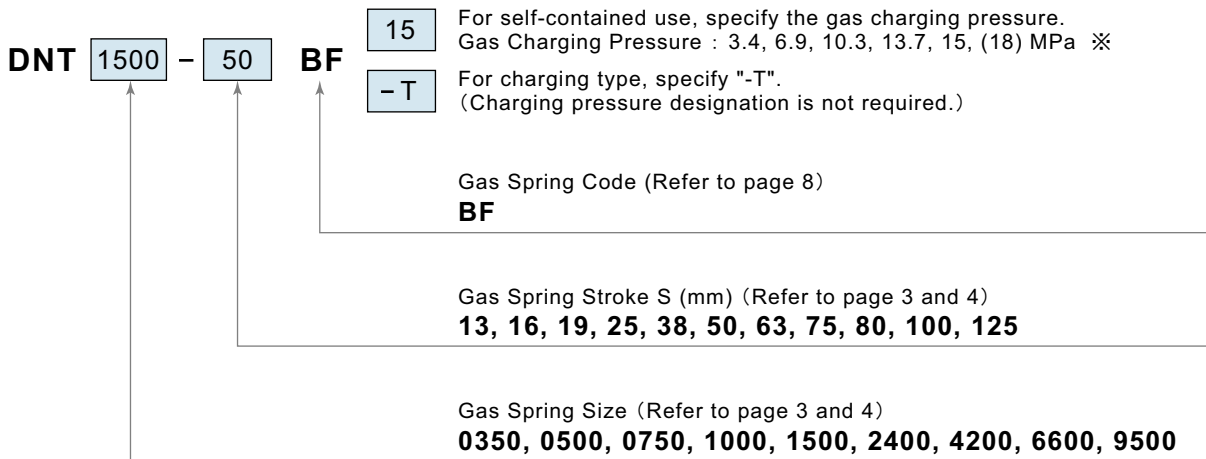

※: Choose one of the recommended gas pressure levels shown above. For the charging pressure other than above, specify the pressure to one digit after the decimal. The gas charging range is 3.4 MPa to 15 MPa at 20°C. (3.4~18MPa for DNT0350 only)

Ordering flange by itself

Example: DJF063-FC

In case requiring only the flange, please specify the model name of the flange as below.

